
Comp. Loc. Connector Stations


1.1 Connector Stations Overview

- 1 ⇒ "1.18 Coupling, front bumper, right, through MY 2014", page 23
- 2 > "1.2 Connector station on right A-pillar", page 2
- 3 ⇒ "1.13 Connector station, right front door", page 17
- 4 ⇒ "1.15 Connector station behind glove compartment", page 20
- 5 ⇒ "1.21 Coupling point left front center tunnel", page 27
- 6 ⇒ "1.3 Connector station below front passenger's seat", page 4
- 7 ⇒ "1.11 Connector station, right rear door", page 15
- 8 ⇒ "1.8 Connector station rear right center armrest", page 11
- 8 ⇒ "1.22 Coupling, rear seat, right", page 28
- 9 = "1.14 Connector station, relay and fuse carrier in luggage compartment, right", page 17
- 10 ⇒ "1.9 Connector station, rear bumper", page 11
- 10 ⇒ "1.24 Coupling, trailer operation", page 30
- 11 ⇒ "1.16 ANC microphones coupling", page 21
- 12 ⇒ "1.7 Connector station rear left center armrest", page 10
- 13 ⇒ "1.10 Connector station, left rear door", page 14
- 13 ⇒ "1.23 Coupling, rear seat, left", page 29
- 14 ⇒ "1.4 Connector station below driver's seat", page 5
- 15 ⇒ "1.12 Connector station left front door", page 16
- 16 ⇒ "1.5 Connector station on left A-pillar", page 6
- 17 ⇒ "1.6 Connector station in E-Box, plenum chamber", page 7
- 18 ⇒ "1.19 Coupling, front bumper, left, from MY 2015", page 24
- 19 ⇒ "1.20 Connector station engine compartment", page 24
- 20 ⇒ "1.17 Coupling in plenum chamber, through MY 2014", page 22

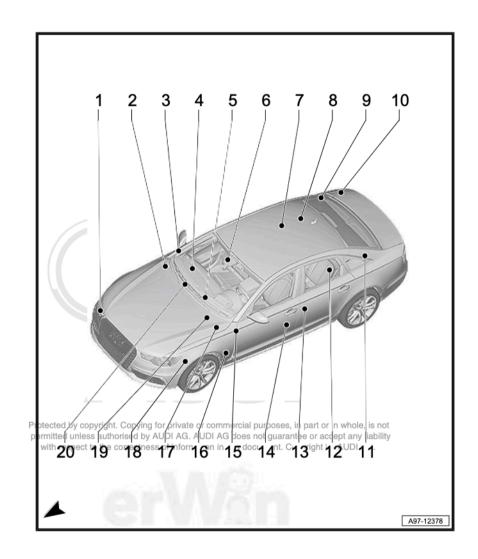

1.2 Connector station on right A-pillar

- ◆ ⇒ "1.2.1 Connector station on right A-pillar, LHD", page 2
- ◆ ⇒ "1.2.2 Connector station on right A-pillar, RHD", page 3
- 1.2.1 Connector station on right A-pillar, LHD
- 1 Not used
- 2 Not used
- 3 Not used
- 4 17-Pin Connector -T17o-, black
- 5 17-Pin Connector -T17q-, brown
- 6 17-Pin Connector -T17p-, yellow

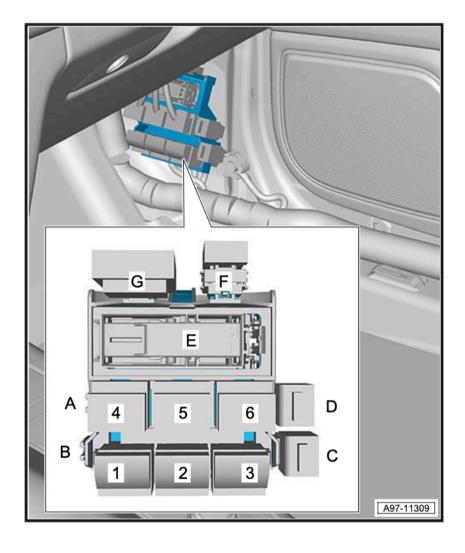

1.2.2 Connector station on right A-pillar, RHD

E - 46-Pin Connector -T46a-, CAN Separating Connector, black

1 - 17-Pin Connector -T17i-, black


2 - 17-Pin Connector -T17h-, red

3 - 17-Pin Connector -T17g-, blue

4 - 17-Pin Connector -T17f-, white

5 - 17-Pin Connector -T17k-, green

6 - Not used

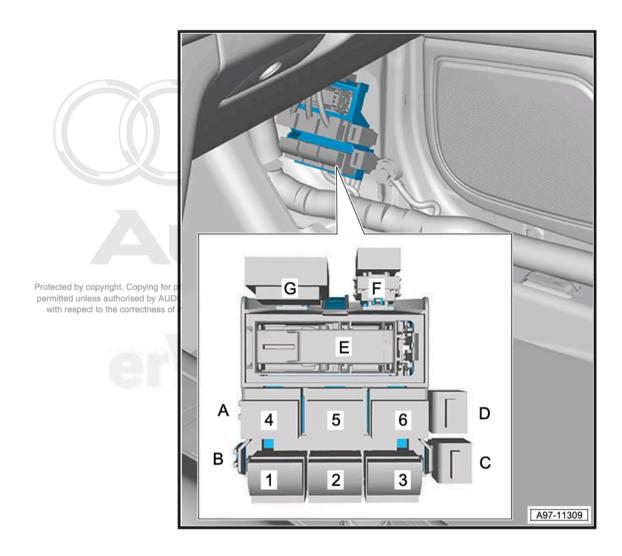


1.3 Connector station below front passenger's seat



Note

Illustration shows left-hand drive.

- 1 6-Pin Connector -T6i-, green
- 2 17-Pin Connector -T17n-, red
- 3 10-Pin Connector -T10e-, black
- 4 4-Pin Connector -T4ad-, black
- 5 3-Pin Connector -T3t-, yellow
- 6 Not used
- 7 4-Pin Connector -T4em-, black
- 8 4-Pin Connector -T4gm-, black
- 9 Not used
- 10 Not used

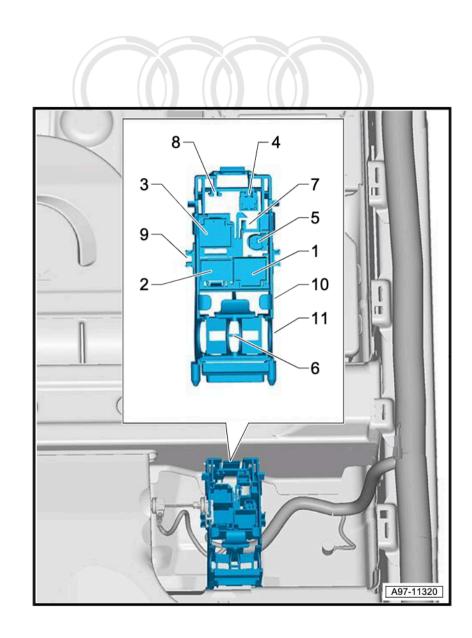


Connector station below driver's seat 1.4




Note

Illustration shows left-hand drive.

- 1 6-Pin Connector -T6h-, green
- 2 17-Pin Connector -T17m-, red
- 3 10-Pin Connector -T10d-, black
- 4 4-Pin Connector -T4w-, black
- 5 3-Pin Connector -T3q-, yellow
- 6 Not used
- 7 4-Pin Connector -T4el-, black
- 8 4-Pin Connector -T4gl-, black
- 9 Not used
- 10 Not used

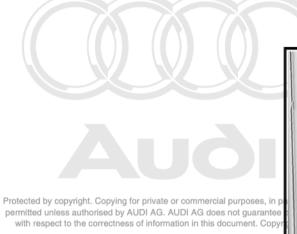

permitted unless authorised by AUDI AG. AUDI AG does not guarantee with respect to the correctness of information in this document. Copy

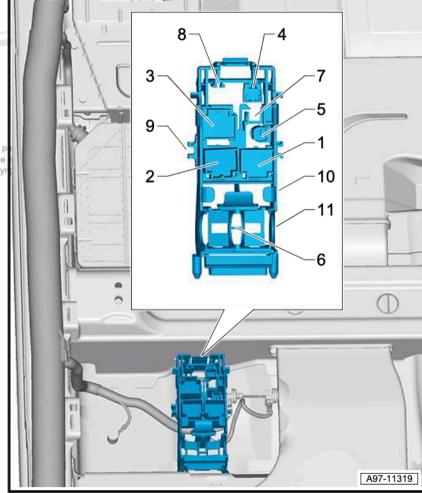


1.5 Connector station on left A-pillar

- ◆ ⇒ "1.5.1 Connector station on left A-pillar, LHD", page 6
- ◆ ⇒ "1.5.2 Connector station on left A-pillar, RHD", page 7

1.5.1 Connector station on left A-pillar, LHD

E - 46-Pin Connector -T46a-, CAN Separating Connector, black

- 1 17-Pin Connector -T17k-, green
- 2 17-Pin Connector -T17h-, red
- 3 17-Pin Connector -T17f-, white
- 4 17-Pin Connector -T17I-, grey
- 5 17-Pin Connector -T17i-, black
- 6 17-Pin Connector -T17g-, blue

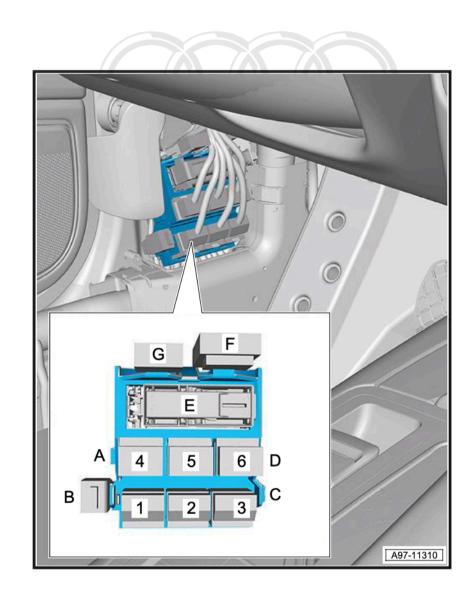


1.5.2 Connector station on left A-pillar, RHD

- 1 17-Pin Connector -T17o-, black
- 2 Not used
- 3 17-Pin Connector -T17I-, grey
- 4 Not used
- 5 Not used
- 6 17-Pin Connector -T17p-, yellow


1.6 Connector station in E-Box, plenum chamber

- ◆ ⇒ "1.6.1 Connector station in E-Box, plenum chamber, LHD", page 8
- ◆ ⇒ "1.6.2 Connector station in E-Box, plenum chamber, RHD", page 9

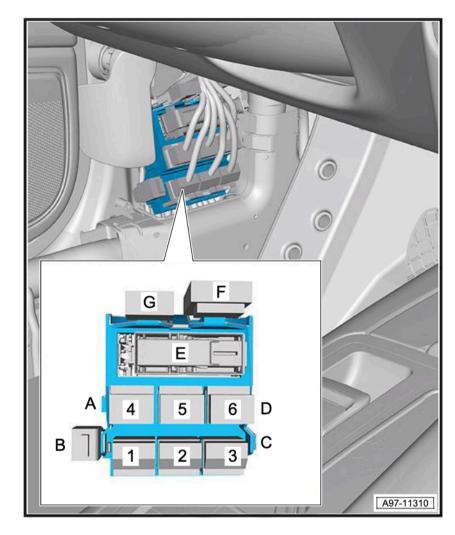

1.6.1 Connector station in E-Box, plenum chamber, LHD


- 6 17-Pin Connector -T17z-, brown
- 7 17-Pin Connector -T17b-, red
- 8 17-Pin Connector -T17a-, white

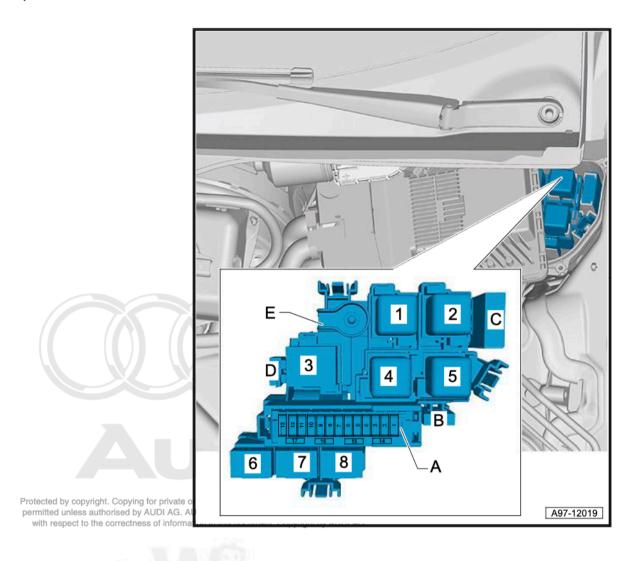

1.6.2 Connector station in E-Box, plenum chamber, RHD

- 6 17-Pin Connector -T17z-, brown
- 7 17-Pin Connector -T17b-, red
- 8 17-Pin Connector -T17a-, white



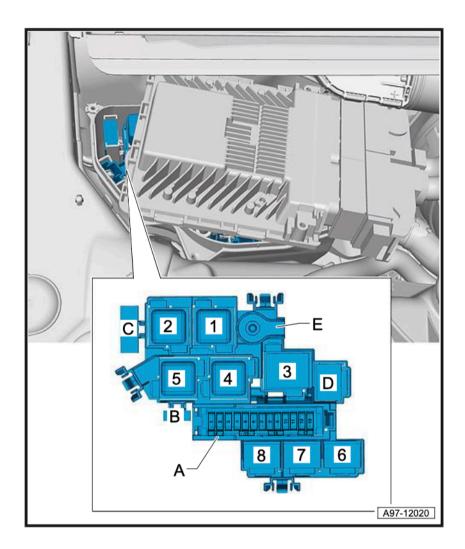


1.7 Connector station rear left center armrest

- 1 Double Connector -T2ks-, black, to TV Tuner R78 / Digital TV Tuner R171
- 2 4-Pin Connector -T4-, blue, to Multimedia Display Unit 1 Y22
- 3 17-Pin Connector -T17w-, black
- 4 Double Connector -T2cq-, MOST-Bus, black






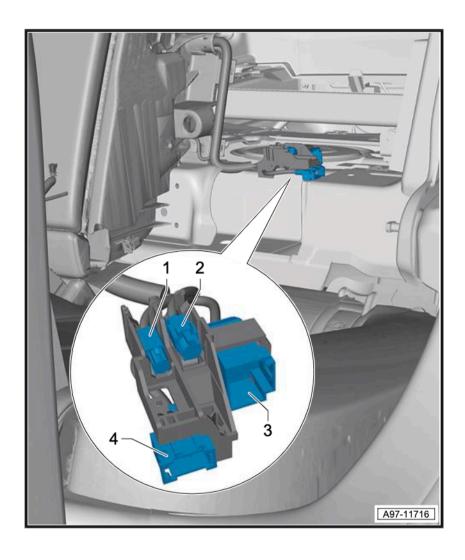

1.8 Connector station rear right center armrest

- 1 Double Connector -T2kt-, black, to DVD Changer R161
- 2 4-Pin Connector -T4-, black, to Multimedia Display Unit 2 Y23
- 3 17-Pin Connector -T17x-, brown



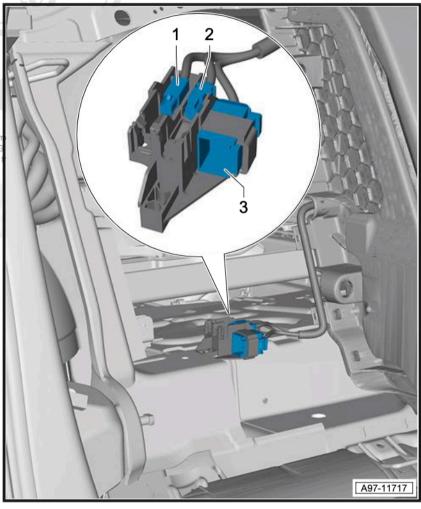


1.9 Connector station, rear bumper

- ◆ ⇒ "1.9.1 Connector station, rear bumper, through MY 2014", page 12
- ♦ ⇒ "1.9.2 Connector station, rear bumper, from MY 2015", page 13

1.9.1 Connector station, rear bumper, through MY 2014

1 - 8-Pin Connector -T8av- , black



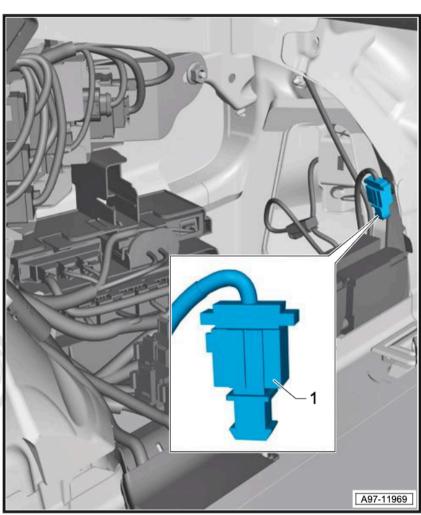




1.9.2 Connector station, rear bumper, from MY 2015

A - 16-Pin Connector -T16v-, brown

B - 12-Pin Connector -T12s- , black

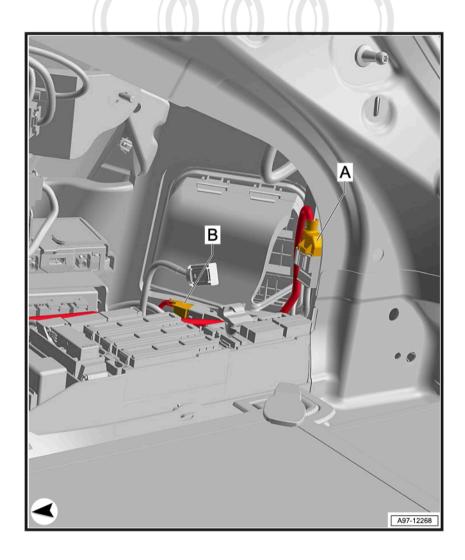


1.10 Connector station, left rear door

A - 27-Pin Connector -T27c-






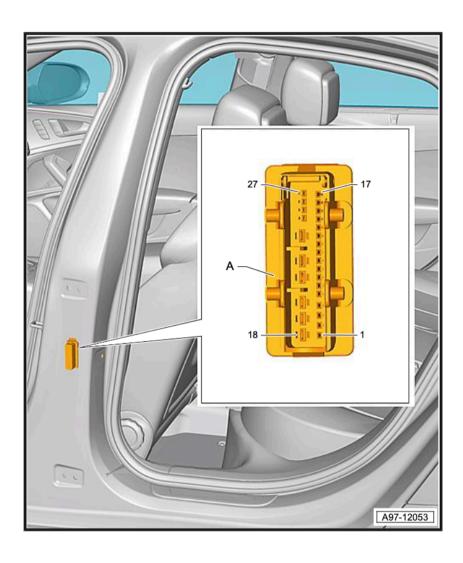

1.11 Connector station, right rear door


A - 27-Pin Connector -T27d-

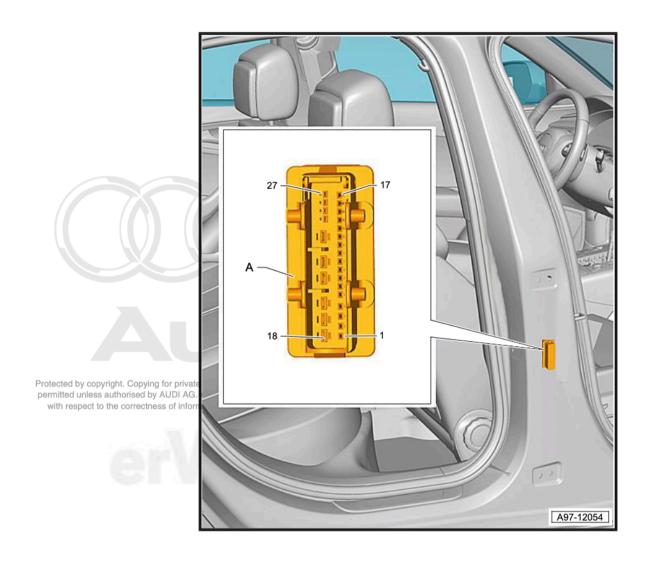

1.12 Connector station left front door

- A 23-Pin Connector -T23a-
- B 5-Pin Connector -T5bt-, connection left Peripheral Camera R244




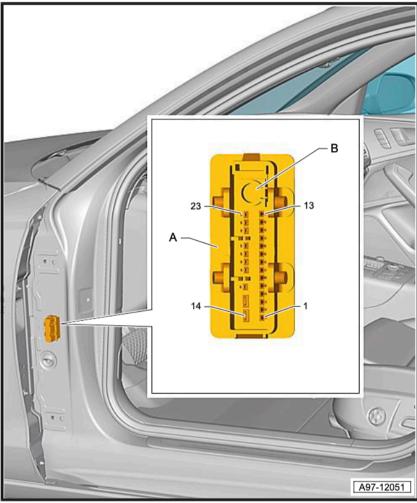

1.13 Connector station, right front door

- A 23-Pin Connector -T23b-
- B 5-Pin Connector -T5aq-, connection right Peripheral Camera R245



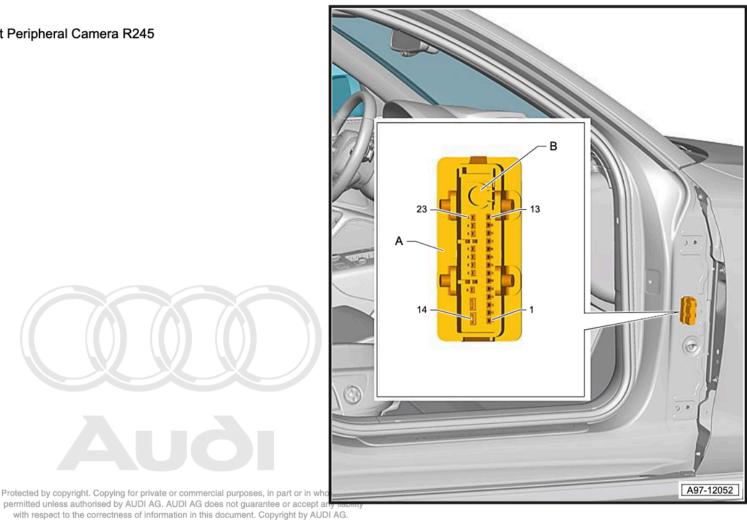


1.14 Connector station, relay and fuse carrier in luggage compartment, right

- ♦ ⇒ "1.14.1 Connector station, relay and fuse carrier in luggage compartment, right, through MY 2014", page 18
- ♦ ⇒ "1.14.2 Connector station, relay and fuse carrier in luggage compartment, right, from MY 2015", page 19

1.14.1 Connector station, relay and fuse carrier in luggage compartment, right, through MY 2014


A - 46-Pin Connector -T46b- , CAN Separating Connector, black

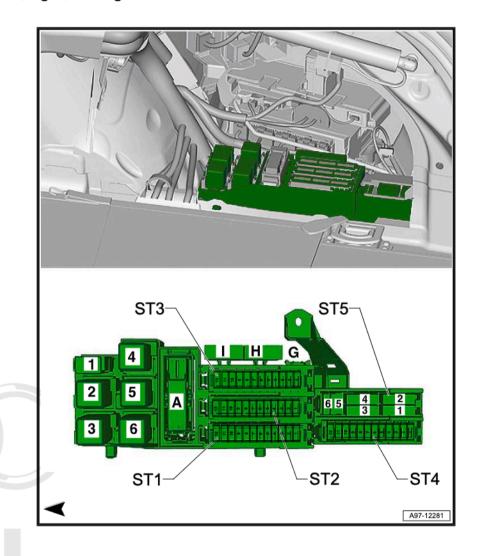

1.14.2 Connector station, relay and fuse carrier in luggage compartment, right, from MY 2015

A - 46-Pin Connector -T46b-, black, CAN Separating Connector



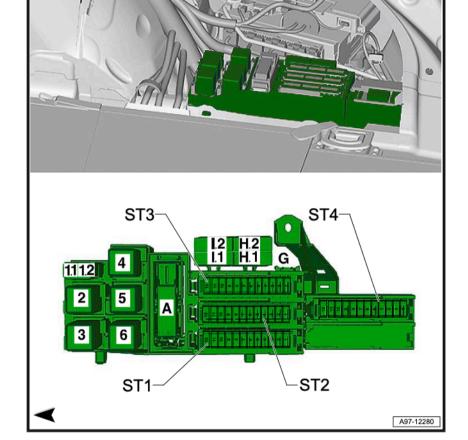


1.15 Connector station behind glove compartment

A - 12-Pin Connector -T12k-






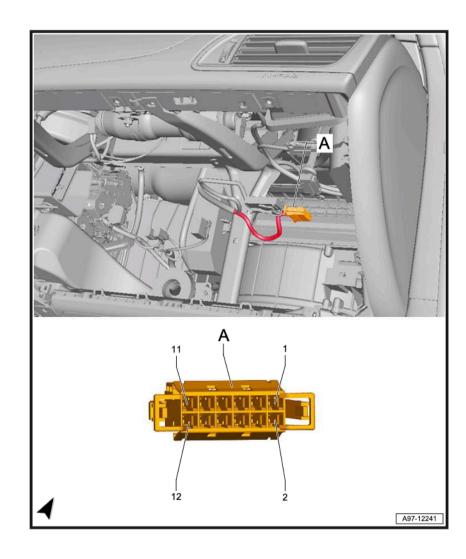

1.16 ANC microphones coupling


A - 8-Pin Connector -T8bb-



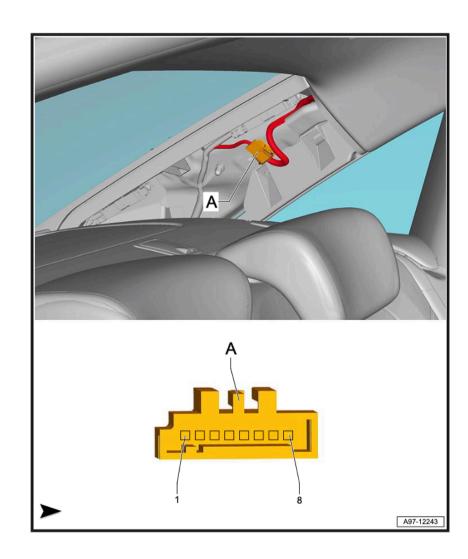

1.17 Coupling in plenum chamber, through MY 2014


A - 5-Pin Connector -T5- , black

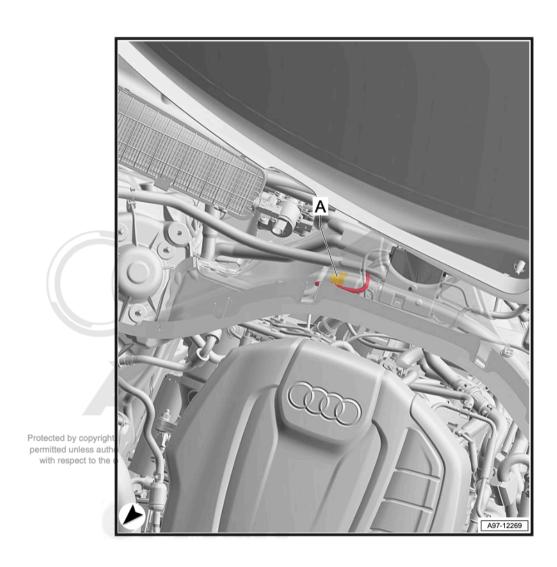

1.18 Coupling, front bumper, right, through MY 2014


A - 8-Pin Connector -T8i-, black



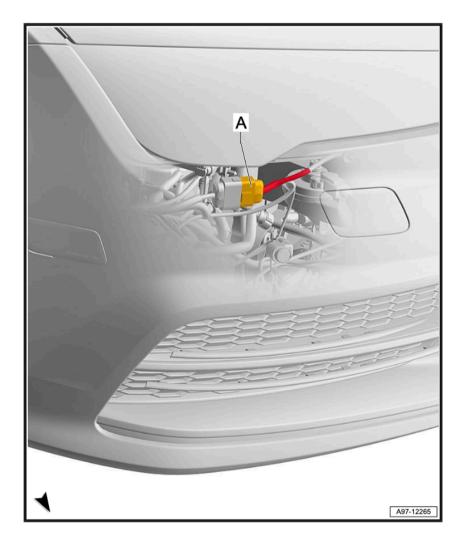

1.19 Coupling, front bumper, left, from MY 2015

A - 8-Pin Connector -T8i-, black

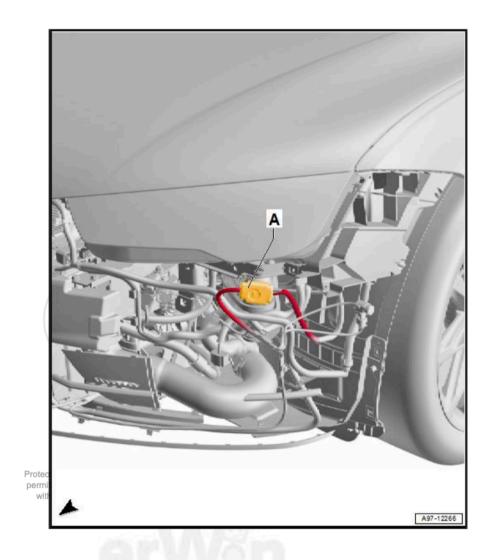


1.20 Connector station engine compartment

- ◆ ⇒ "1.20.1 Connector station engine compartment, LHD", page 25
- ♦ ⇒ "1.20.2 Connector station engine compartment, RHD", page 26


1.20.1 Connector station engine compartment, LHD

- 1 14-Pin Connector -T14s-, brown
- 2 14-Pin Connector -T14t-, black
- 3 14-Pin Connector -T14u-, black
- 4 Double Connector -T2nb-, black

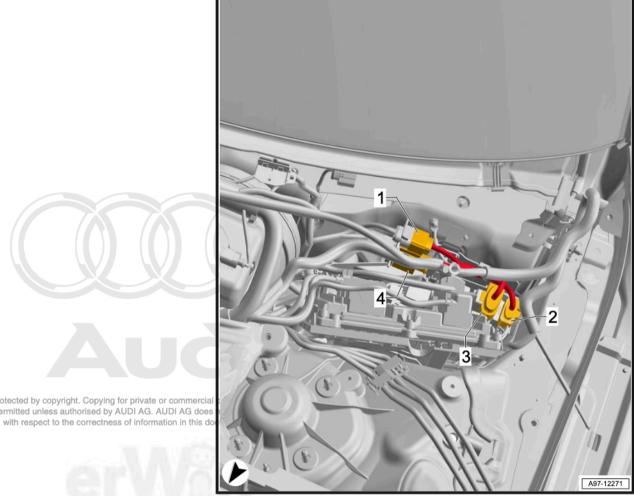

1.20.2 Connector station engine compartment, RHD

- 1 14-Pin Connector -T14t-, black
- 2 14-Pin Connector -T14u-, black
- 3 14-Pin Connector -T14s-, brown
- 4 Double Connector -T2nb-, black

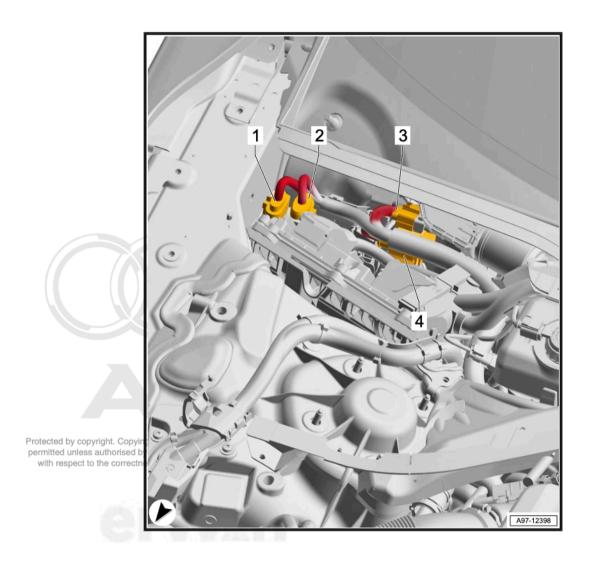


1.21 Coupling point left front center tunnel

A - 8-Pin Connector -T8p- , black





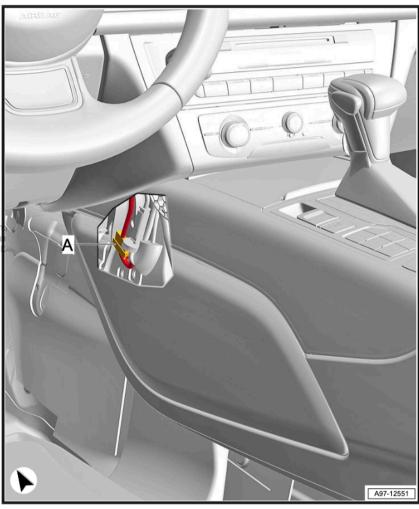


1.22 Coupling, rear seat, right

A - 17-Pin Connector -T17v-, red



1.23 Coupling, rear seat, left

A - 17-Pin Connector -T17u- , red

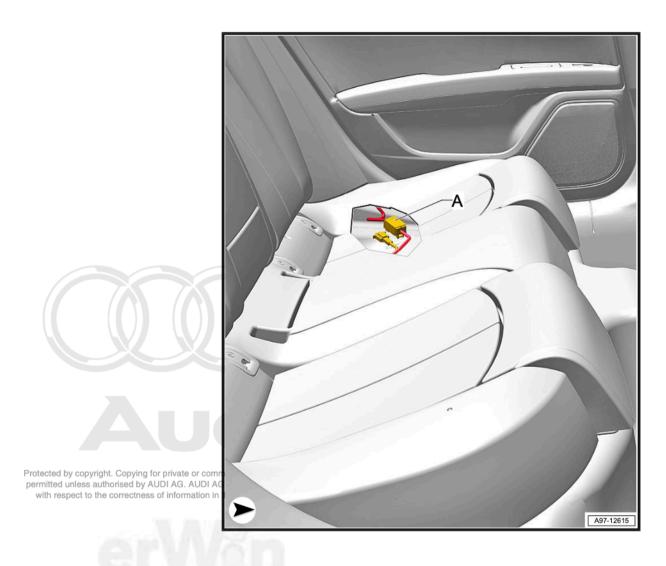

A - 17-Pin Connector -T17t- , black

